

CD Spinning Tops

Items needed (quantity per creation)

- 1x CD
- 1x dried felt tip or a length of dowel
- Hot glue (or bluetac)

Optional

- Embellishments
- Permanent markers



Instructions

1- Although not essential this would be the step where you can decorate the CD, try different patterns or colours to see that happens when the CD is spun.

2- Get your CD and place the old felt-tip or dowel through the middle, place the CD about 3/4 down the felt.

3- Glue/bluetac into place.

SPIN, watch it go

